

User Manual

office^{pro}

A3 LAMINATOR



Product
Info



www.aldi.com.au

+ VIDEO

QR codes take you where you want to go quickly and easily

Whether you require **product information, spare parts** or **accessories**, details on **warranties** or **aftersales services**, or if you want to watch a **product demonstration video**, our QR codes will take you there in no time at all.

What is a QR code?

A QR code (QR = Quick Response) is a type of matrix that can be read with a smartphone camera and that contains a link to a website or contact details, for example.

Advantage: You do not need to manually enter a website address or contact details.

How it works

To scan the QR code, all you need is a smartphone with QR code reader software and an internet connection. This type of software can be downloaded for free from your smartphone's app store.

Try it out now

Just scan the QR code with your smartphone and find out more about the ALDI product you have purchased.

Your ALDI Service Portal

All details mentioned above can also be found in the ALDI Service Portal at www.aldi.com.au.




Depending on your tariff plan you may be charged for the connection.


Contents

Overview	4
Use.....	5
Package contents / device parts.....	6
General information.....	7
Reading and storing the user manual	7
Explanation of symbols	7
Safety	8
Proper use.....	8
Safety instructions.....	8
First use.....	11
Checking the laminator and package contents	11
Setting up the laminator	12
Activating / deactivating the laminator	12
Operation.....	12
Laminating.....	13
Removing a jammed laminating pouch	14
Cleaning.....	14
Cleaning the heating rollers	15
Storage	15
Technical data	16
Disposal.....	16
Disposing of the packaging	16
Disposing of old devices	16
Warranty details.....	17
Repair and refurbished goods or parts notice	18

A

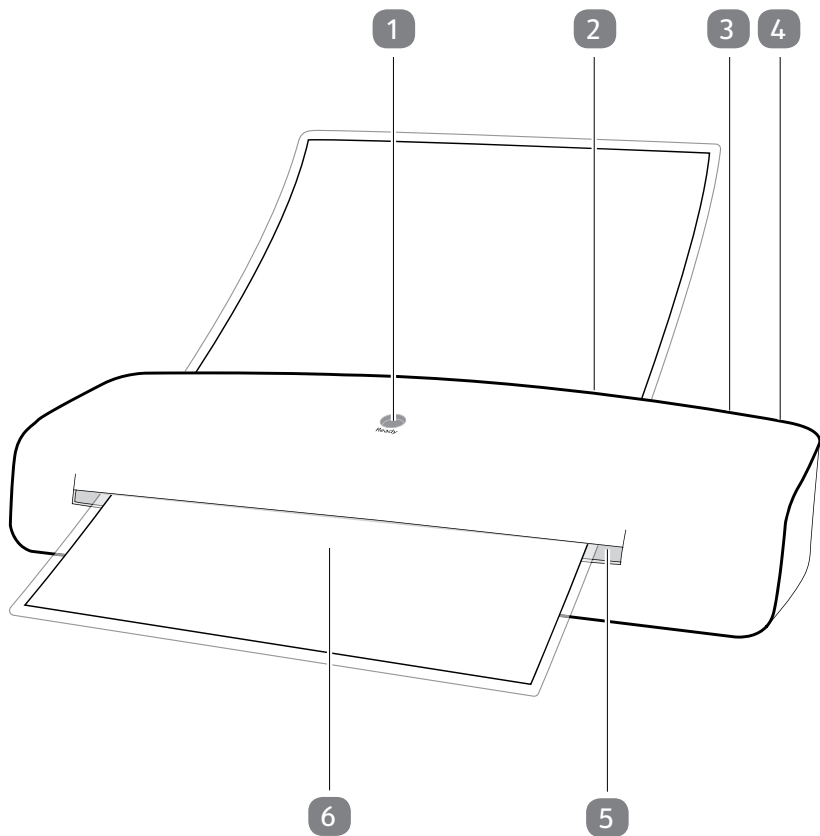

B

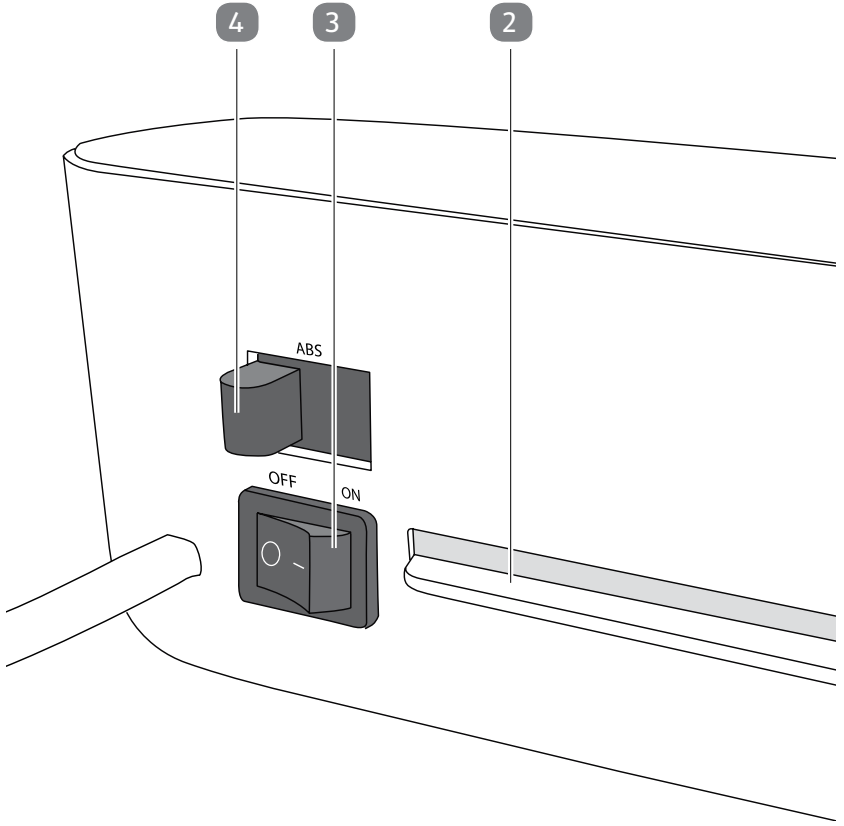

Package contents / device parts

- 1 Ready indicator
- 2 Laminating pouch infeed slot
- 3 ON / OFF switch
- 4 ABS switch (antiblocking system)
- 5 Laminating pouch output slot
- 6 Laminating pouch (DIN A3, 80 mic), 8×

General information

Reading and storing the user manual



This user manual accompanies this A3 laminator (hereafter referred to as “laminator”). It contains important information on setup and handling.

Before using the laminator, read the user manual carefully. This particularly applies to the safety notes. Failure to do so may result in personal injury or damage to the laminator.

Store the user manual for future use. Make sure to include this user manual when passing the laminator on to third parties. The user manual can also be downloaded from our website as a PDF file at www.monolith-support.com.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the laminator or on the packaging.



WARNING!

This signal symbol/word designates a hazard with moderate risk, which may result in death or severe injury if not avoided.

NOTICE!

This signal word warns of possible damage to property.



This symbol provides you with useful additional information on handling and use.



N5586

The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.



Read the user manual.



The symbol indicates that the product is of CLASS II (double insulated) construction. It does not require a safety connection to electrical earth (ground).



Only use the laminator in indoor areas.

Safety

Proper use

The laminator is only designed for laminating. It is only intended for private use and not suitable for commercial purposes.

Only use the laminator as described in this user manual. Any other use is deemed improper and may result in damage to property or even personal injury. The laminator is not a children's toy.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety instructions



Risk of electric shock!

A faulty electrical installation, excessive line voltage or incorrect operation may result in an electric shock.

- Only connect the laminator in indoor areas to a properly installed AC 240 V socket with a protective conductor.
- Plug adapters or extension cords must also be equipped with a protective conductor.
- Only connect the laminator to an easily accessible socket so that you can quickly disconnect it from the mains in case of a failure.
- Do not operate the laminator if it is visibly damaged or if the mains cord or mains plug is defective.
- If the mains cord of the laminator is damaged, the manufacturer, its customer service team or a person with technical qualifications must replace it.
- Do not open the housing; instead, have a qualified professional perform the repairs. Contact the service address provided on the warranty card. Liability and warranty claims are waived in the event of repairs or conversions performed by the user, improper connection of the device or incorrect operation.

-
- Only parts that comply with the original device data may be used for repairs. Electrical and mechanical parts, which are essential for providing protection against sources of danger, are located in this laminator.
 - Do not operate the laminator with an external timer or separate telecontrol system.
 - Do not immerse the laminator or the mains cord or mains plug in water or other liquids.
 - Never touch the mains plug with damp hands.
 - Do not perform any other work (such as cleaning) on the laminator while it is operating.
 - Never pull the mains plug out of the socket by the mains cord; instead, always do so by taking hold of the mains plug.
 - Never use the mains cord as a carrying handle.
 - Keep the laminator, mains plug and mains cord away from open flames and hot surfaces.
 - Lay the mains cord so that it does not pose a tripping hazard.
 - Do not kink the mains cord and do not lay it over sharp edges.
 - Only use the laminator in indoor areas. Do not use them in wet rooms or in the rain.
 - Never store the laminator so that it is at risk of falling into a bath tub or washbasin.
 - Never reach to retrieve the laminator if it has fallen in water. In such a case, immediately disconnect the mains plug.
 - Make sure that children do not insert any objects into the laminator.
 - Always switch the laminator off and pull the mains plug out of the socket when you are not using the laminator, cleaning it or in the event of a fault.



Danger for children and persons with impaired physical, sensory or mental capacities (e.g. partially disabled persons, older persons with reduced physical and mental capacities) or lack of experience and knowledge (e.g. older children).

- This laminator may be used by persons with impaired physical, sensory or mental capacities or those lacking experience and knowledge if they are supervised or have been instructed in how to safely use the laminator and have understood the risks associated with operating it. Children must not play with the laminator. Cleaning and user maintenance must not be performed by children.
- Keep children away from the laminator and connector cable.
- Do not leave the laminator unattended while it is operating and do not perform any other activities during operation.
- Do not allow children to play with the packaging wrapper. Children may get caught in it when playing and suffocate.
- Keep the laminator away from pets.
- Never fill the laminator with liquid.
- Clearly advise other users of the risks.

NOTICE!

Risk of damage!

Improper handling of the laminator may damage the laminator.

- Place the laminator on an easily accessible, level, dry, heat-resistant and sufficiently stable work surface. Do not place the laminator on the edge of the work surface.
- Avoid the build-up of heat by not placing the laminator directly up against a wall or under cupboards or similar.
- Protect the laminator from direct sunlight.

- Never place the laminator on or near hot surfaces (e.g. stovetops, heaters etc.).
- Ensure that the mains cord does not come into contact with hot parts.
- Never expose the laminator to high temperatures (heaters etc.) or to the effects of the weather (rain etc.).
- Never laminate damp documents or organic objects (e.g. flowers, leaves etc.).
- Do not cut the laminating pouches into pieces before laminating and do not in any case cut off the sealed edges from the laminating sheets.
- Stop using the laminator if its plastic parts exhibit cracks or breaks or are deformed. Only replace damaged parts with corresponding original spare parts.
- Only laminate at room temperature (approx. 10–25 °C).
- Never insert metallic objects (e. g. paper clips, staples etc.) or objects other than laminating pouches which are intended for this laminator into the laminating pouch infeed slot.
- The laminator has vents. Never cover them with other objects such as magazines, blankets or similar.
- Never attempt to clean the laminator by immersing it in water and do not use a steam cleaner to clean it. Otherwise, you could damage the laminator.

First use

Checking the laminator and package contents

NOTICE!

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointy object, you may quickly damage the laminator.

- Therefore, be very careful when opening the packaging.

1. Take the laminator out of the packaging.
2. Check whether the laminator or the individual parts exhibit damage. If this is the case, do not use the laminator. Contact the manufacturer at the service address specified on the warranty card.
3. Check to make sure that the delivery is complete (see **fig. A**).

Setting up the laminator

1. Position the laminator so that there is enough space to insert a laminating pouch **6**. Do not position the laminator directly in front of a wall or other objects.
2. Connect the mains plug to a properly installed socket with a protective conductor (AC 240 V, 50 Hz = house connection).

Activating / deactivating the laminator

1. Move the ON / OFF switch **3** to “**ON**” (—) to switch the laminator on.



The ready indicator **1** will turn from black to red once the laminator has reached the correct temperature for lamination.

The preheating time may vary depending on the ambient temperature and air humidity.

2. Move the ON / OFF switch to “**OFF**” (○) to switch the laminator off.

Operation



Risk of injury!

Handling the laminator improperly may result in injury.

- If an object (sleeves, tie etc.) is unintentionally taken into the laminating pouch infeed slot, immediately disconnect the mains plug.

NOTICE!

Risk of damage!

Improper handling of the laminator may lead to damage to the laminator or documents.

- Do not in any case laminate documents with a treated surface (e.g. fax or thermopaper, Polaroid pictures etc.) and papers with surfaces that may be altered through heat (tickets, ultrasonic scans etc.).
- Only use one laminating pouch per lamination, as laminating pouches may stick tightly together.
- Do not leave any laminating pouches in or next to the laminator after lamination.



When using the laminator, a slight odour may be produced. Ensure there is sufficient ventilation in the room, e.g. by opening windows.

Laminating

1. Move the ON/OFF switch **3** to “**ON**” (—) (see **fig. B**).

The ready indicator **1** will turn from black to red within the next 1½–2 minutes.

2. Once the ready indicator is red, place the document between the two sides of the laminating pouch **6**.

Make sure that the document is flush with and aligned as close as possible to the sealed edge of the laminating pouch.

3. Insert the laminating pouch so that it is centred and with the closed-edge first into the laminating pouch infeed slot **2** on the back of the laminator.

The heating rollers will automatically pull the laminating pouch in and move it to the laminating pouch output slot **5** on the front of the laminator. Do not use force to pull out the laminating pouch.

4. Remove the laminating pouch and let it cool off briefly on a flat surface.






- If necessary, you can cut off excessive material after it has cooled off.
- Repeat the process if the laminating pouch has not adequately adhered to the document.

5. Move the ON/OFF switch to “**OFF**” (○) to switch the laminator off.

Removing a jammed laminating pouch

The laminator is equipped with an antiblocking system. If the laminating pouch was not inserted straight or it becomes jammed in the laminator, proceed as follows:

1. Move the ABS switch  towards the laminating pouch infeed slot  and hold it down (see **fig. B**).
2. Pull the laminating pouch  out of the laminator.



It is recommended you pull the laminating pouch out in the direction of its larger end.

You can place the document in a new laminating pouch and laminate it again.

Cleaning



Burn hazard!

The laminator will become hot during operation. You may burn yourself.

- Always let the laminator cool off completely before you clean it.

NOTICE!

Risk of short circuit!

Water that has penetrated the housing may cause a short circuit.

- Never submerge the laminator in water.
- Make sure that no water penetrates the housing.

NOTICE!

Risk of damage!

Improper handling of the laminator may result in damage to the laminator.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles, sharp or metallic cleaning utensils such as

knives, metal sponges and the like. They could damage the surfaces.

- Do not in any case place the laminator in the dishwasher. It would be destroyed as a result.
1. Disconnect the mains plug before cleaning.
 2. Let the laminator cool off completely.
 3. Use a damp cloth to wipe off the laminator. Let all parts dry completely afterwards.

Cleaning the heating rollers

1. Switch the laminator on by moving the ON / OFF switch **3** to “ON” (—).
2. Once the ready indicator **1** turns red, fold a sheet of paper and insert it, folded-edge first, into the laminating pouch infeed slot **2**.
3. Keep repeating this process until no more glue deposits cling to the paper.
4. Switch the laminator off by moving the ON / OFF switch to “OFF” (○).

Storage


NOTICE!

Risk of damage!

Improper storage of the laminator may result in damage to the laminator.

- Never store the laminator next to a heat source.
- Do not fold or kink the mains cord.
- Only stow the laminator if it is dry.
- Always store the laminator in a clean, dry area that it is protected from direct sunlight and is not accessible for children.
- Use the original packaging for storage.

Technical data

Model:	OL 350-L-17
Product code:	95019
Model colour:	white / grey mat
Mains voltage:	AC 240 V / 50 Hz
Power consumption:	600 W; 2.5 A / 100 Watt; 0.5 A
Protection class:	II 
Weight:	approx. 1.4 kg
Dimensions (W × D × H):	441 mm × 121 mm × 76 mm
Preheating time:	1½–2 min.
Pouch thickness:	80 mic to 125 mic
Operating speed:	400 mm / min.
Laminating temperature:	approx. 135 °C
Maximum film width:	A3
Rolling mechanism:	2 rollers
Lamination:	hot lamination
Ready indicator:	indicator with thermo-transfer technology
ABS function:	yes

Technical changes reserved.

Disposal

Disposing of the packaging

- Dispose of the packaging separated into single type materials. Dispose of cardboard and carton as waste paper and foils via the recyclable material collection service.

Disposing of old devices

Old devices may not be disposed of in the household waste!

- Should the laminator no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in force in your state or country.



office^{pro}®


A3 Laminator

Warranty Details

The product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product that the consumer has under the Competition and Consumer Act 2010 and similar state and territory laws.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

AFTER SALES SUPPORT

 (AUS) 1300-728 116
Free hotline

 www.monolith-support.com

3

**YEARS
WARRANTY**



office^{pro}®

A3 Laminator

Repair and Refurbished Goods or Parts Notice

Unfortunately, from time to time, faulty products are manufactured which need to be returned to the Supplier for repair.

Please be aware that if your product is capable of retaining user-generated data (such as files stored on a computer hard drive, telephone numbers stored on a mobile telephone, songs stored on a portable media player, games saved on a games console or files stored on a USB memory stick) during the process of repair, some or all of your stored data may be lost.

We recommend you save this data elsewhere prior to sending the product for repair.

You should also be aware that rather than repairing goods, we may replace them with refurbished goods of the same type or use refurbished parts in the repair process.

Please be assured though, refurbished parts or replacements are only used where they meet ALDI's stringent quality specifications.

If at any time you feel your repair is being handled unsatisfactorily, you may escalate your complaint. Please telephone us on 1300-728 116 (Mon–Fri, 8 a.m–5 p.m.) or write to us at:

monolith GmbH / CO Primegrafix Ltd

Unit 27



125-127 Highbury Road Burwood

Victoria

AUSTRALIA 3125

E-mail: australia@monolith-support.com

AFTER SALES SUPPORT

  1300-728 116
Free hotline

 www.monolith-support.com

3

**YEARS
WARRANTY**

ALDI guarantees that our exclusive brand products are developed to our stringent quality specifications. If you are not entirely satisfied with this product, please return it to the nearest ALDI store within 60 days from the date of purchase, for a full refund or replacement, or take advantage of our after sales support by calling the supplier's Customer Service Hotline.



Made in China

office pro[®] is a registered trademark of ALDI Stores

DISTRIBUTED BY:

ALDI STORES

1 SARGENTS ROAD

MINCHINBURY NSW 2770

www.aldi.com.au

AFTER SALES SUPPORT

95019 



 **1300-728 116 (free)**



www.monolith-support.com

MODEL: OL 350-L-17

06/17

3
YEARS
WARRANTY